
## **SJE Rhombus**. Pump Switch Installation Instructions

SJE-Rhombus® wide angle pump switches are designed to provide automatic control of pumps in non-potable water and sewage applications. The SJE PumpMaster®, SJE PumpMaster® Plus and SJE PumpMaster® SPDT pump switches passed NSF Standard 61 protocol by an approved Water Quality Association laboratory for use in potable water applications.

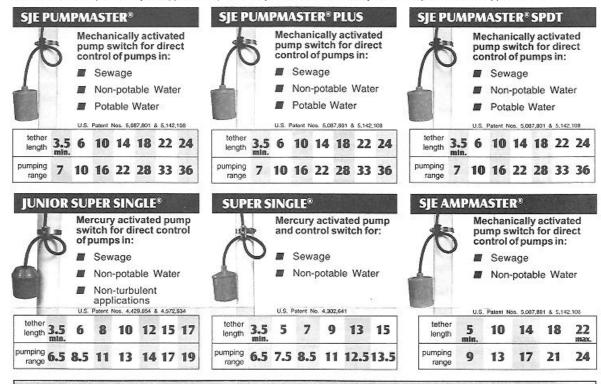

## PREVENTATIVE MAINTENANCE

- Periodically inspect the product. Check that the cable has not become worn or that the housing has not been damaged so as to impair the protection of the
  product. Replace the product immediately if any damage is found or suspected.
- Periodically check to see that the float is free to move and operate the switch.
- Use only SJE-Rhombus<sup>6</sup> replacement parts
- The Junior Super Single® and Super Single® pump switches contain mercury and MUST be recycled or disposed of according to local, state, and federal codes.

## 3 Year Limited Warranty

**Distributed By:** 



(920) 388-0672 vgseptic@hotmail.com



PO Box 1708, Detroit Lakes, MN 56502 1-888-DIAL-SJE • 1-218-847-1317 1-218-847-4617 Fax email: sje@sjerhombus.com

www.sjerhombus.com